


HG-C measurement sensor

Easy user guide

Please follow the procedure from step 1 to 5.

1

Mounting

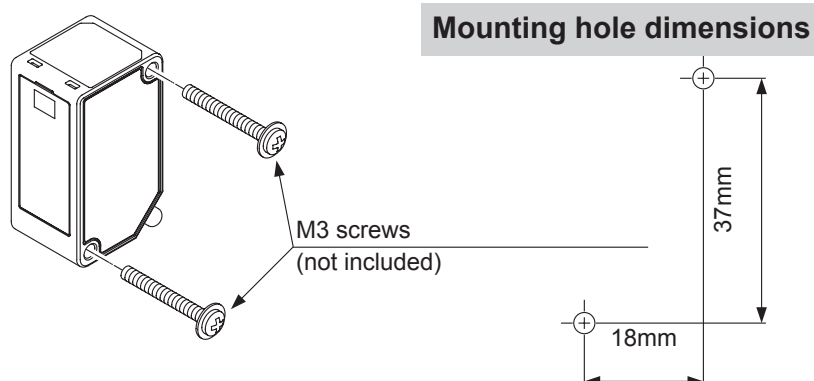

Adjust the height of the sensor.




Example: HG-C1050-P
Adjusted height 50mm


Product No.	Measurement center distance and measuring range	Analog output		Cable length
		Voltage output	Current output	
HG-C1030-P	30±5mm	0 to +5V	4 to 20mA	2m
HG-C1030	30 ±5mm	0 to +5V	4 to 20mA	2m
HG-C1050-P	50 ±15mm	0 to +5V	4 to 20mA	2m
HG-C1050	50 ±15mm	0 to +5V	4 to 20mA	2m
HG-C1100-P	100 ±35mm	0 to +5V	4 to 20mA	2m
HG-C1100	100 ±35mm	0 to +5V	4 to 20mA	2m
HG-C1200-P	200 ±80mm	0 to +5V	4 to 20mA	2m
HG-C1200	200 ±80mm	0 to +5V	4 to 20mA	2m
HG-C1400-P	400 ±200mm	0 to +5V	4 to 20mA	2m
HG-C1400	400 ±200mm	0 to +5V	4 to 20mA	2m

2

Wiring

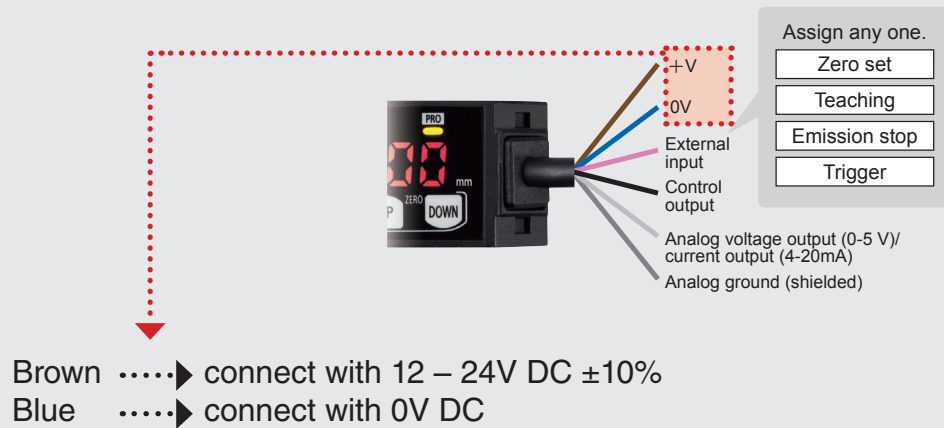


Part description

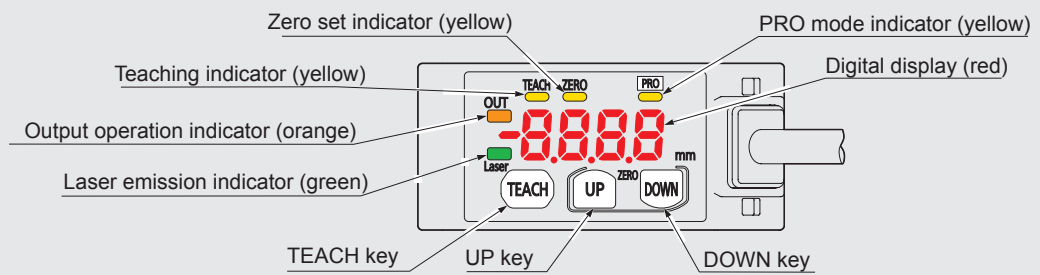

3

Remote zero-adjustment


Press and hold the keys UP and DOWN simultaneously for 3 seconds

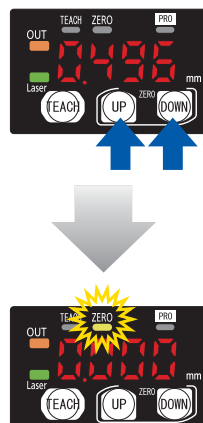


4

Measuring (analog)

Correct

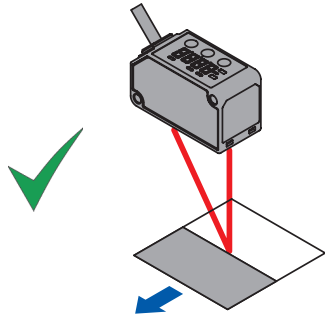


Incorrect

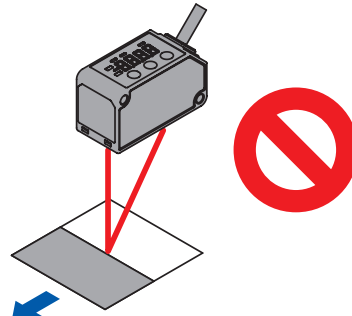

Zero point setting



Measuring

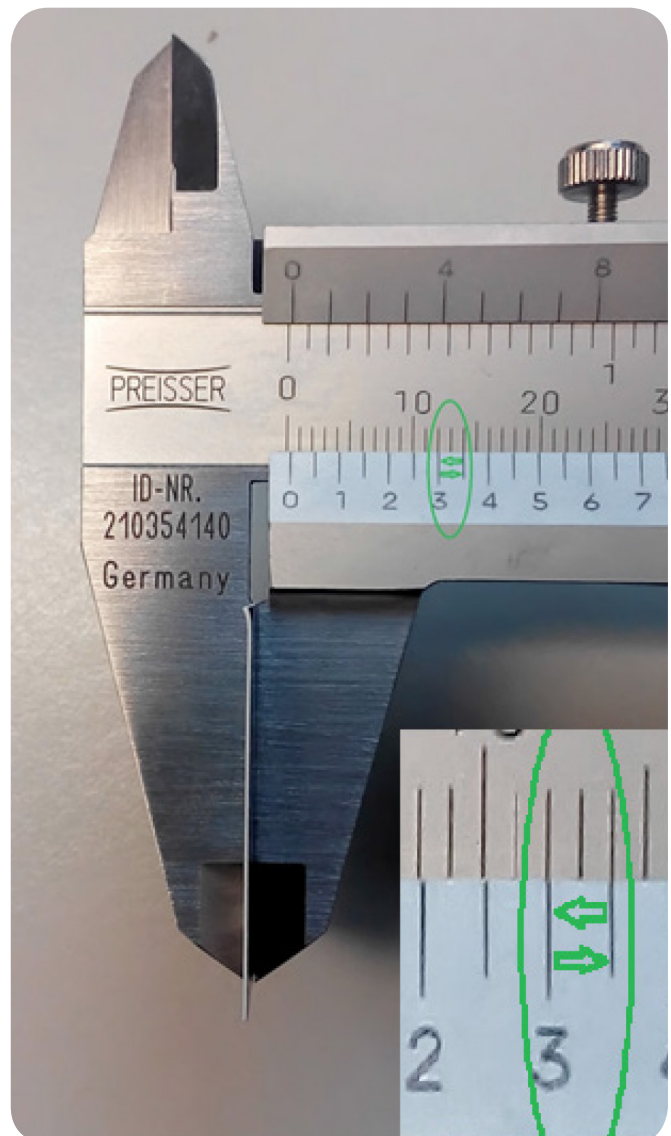

5

Limit teaching (digital)

a) Position sensor without objects

b) Press TEACH key once



c) Position object underneath the sensor

d) Press TEACH key once



If the limit teaching is successful, the word "good" will appear on the display.



Do you need assistance?

Please contact our hotline: +49 (0) 89-45354-2737.

Alternatively, send an e-mail to sensors.peweu@eu.panasonic.com

or contact one of our sales people.

Panasonic[®]

Panasonic Electric Works Europe AG

Robert-Koch-Straße 100 • 85521 Ottobrunn

Tel: +49 (0) 89 45354-1000 • Fax: +49 (0) 89 45354-2111

e-mail: info.peweu@eu.panasonic.com

www.panasonic-electric-works.com